


Elektrischer Anschluss und Inbetriebnahme

1.




Anschluss des Netzgerätes an das Versorgungsnetz (230 V AC)

2.

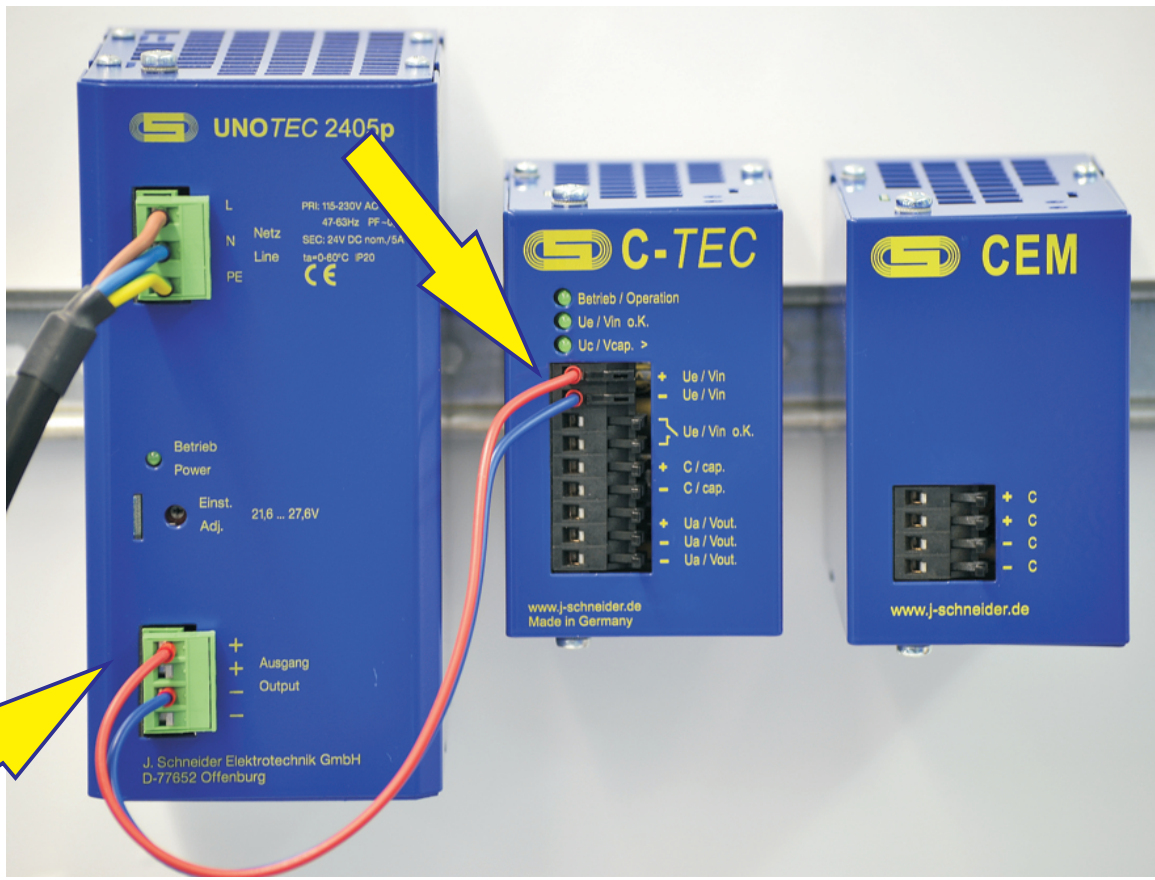


Anschluss des C-TEC an den Ausgang des 24 V DC Netzgerätes

3.

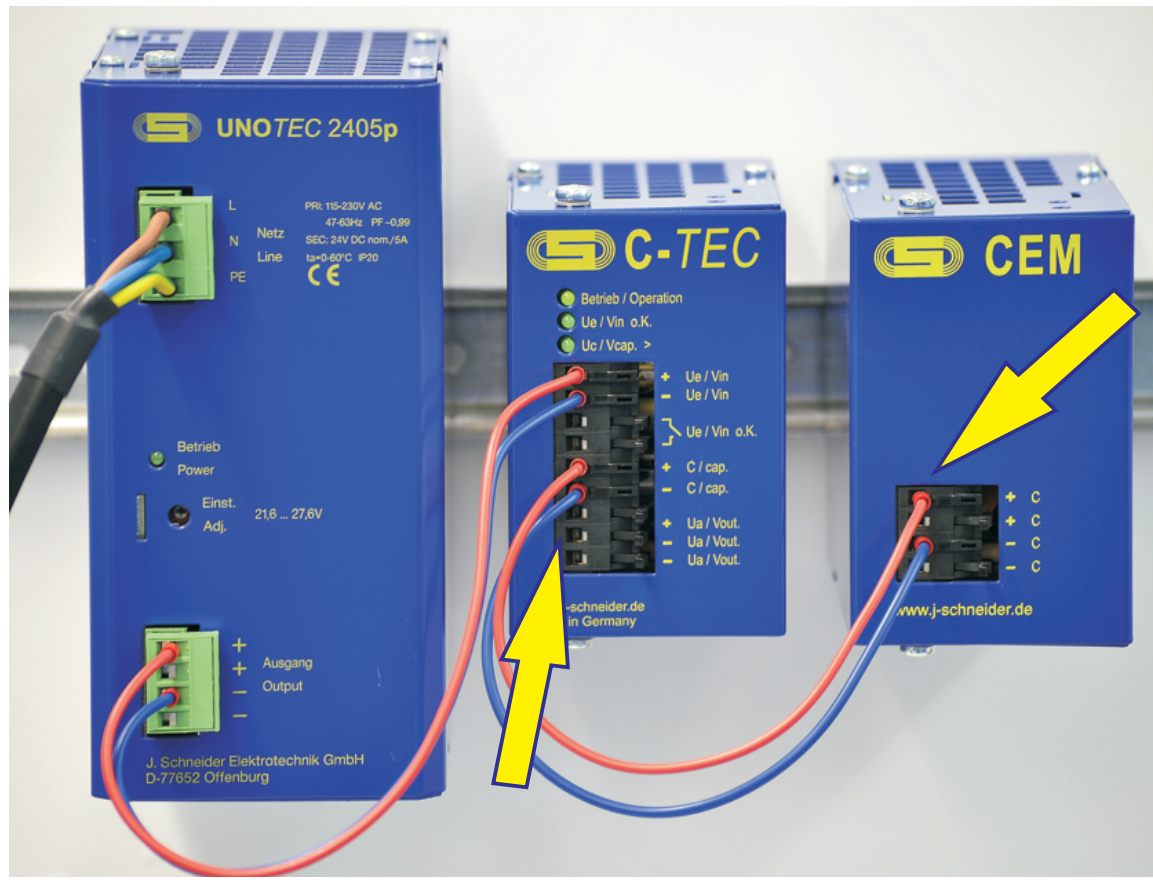

Anschluss des CEM an den Kondensatorausgang des C-TEC

4.

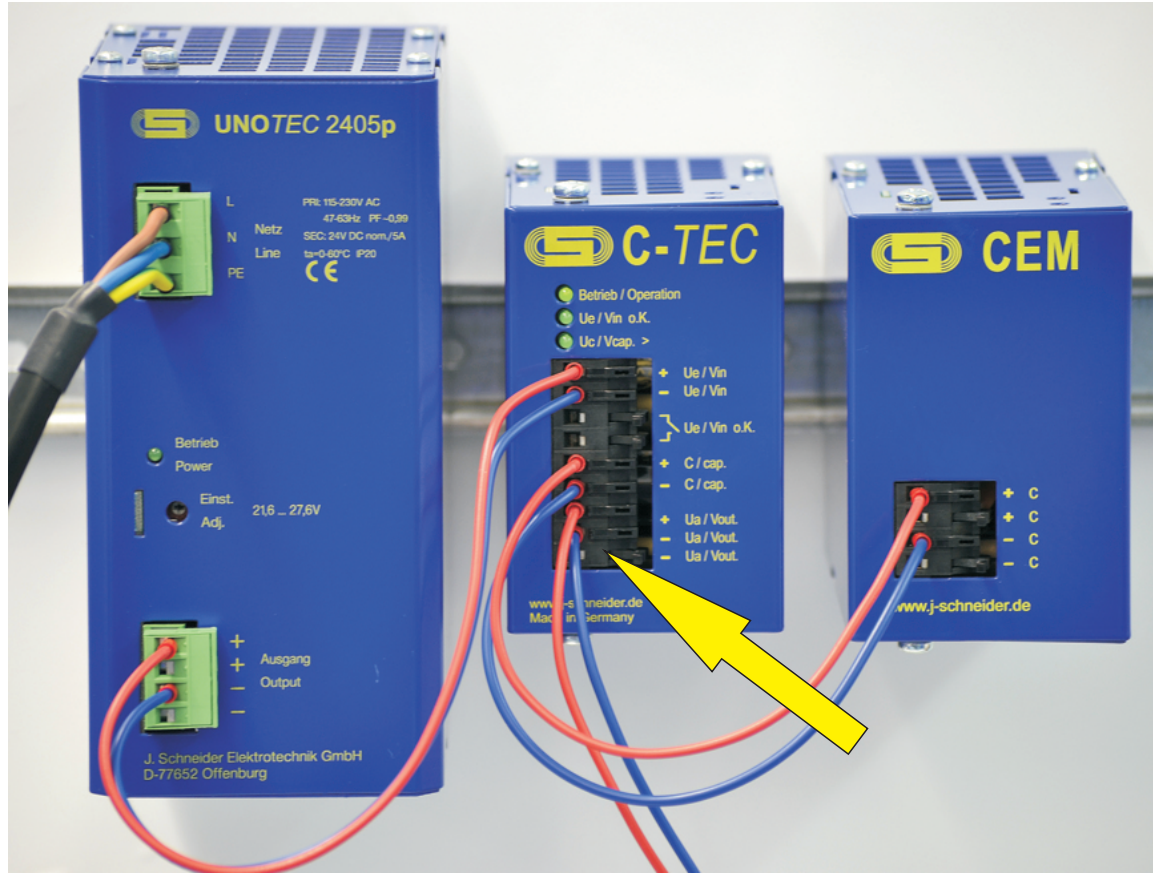

Anschluss der Last an den gepufferten 24 V DC Ausgang des C-TEC

5.




Verdrahtung des Meldekompaktes. Eingangsspannung OK

6.



C-TEC vollständig geladen. Die LEDs „Betrieb/Operation“, „U_e/V_{in} o.K.“ und „U_c/V_{cap} >“ leuchten


Parametrier-Software

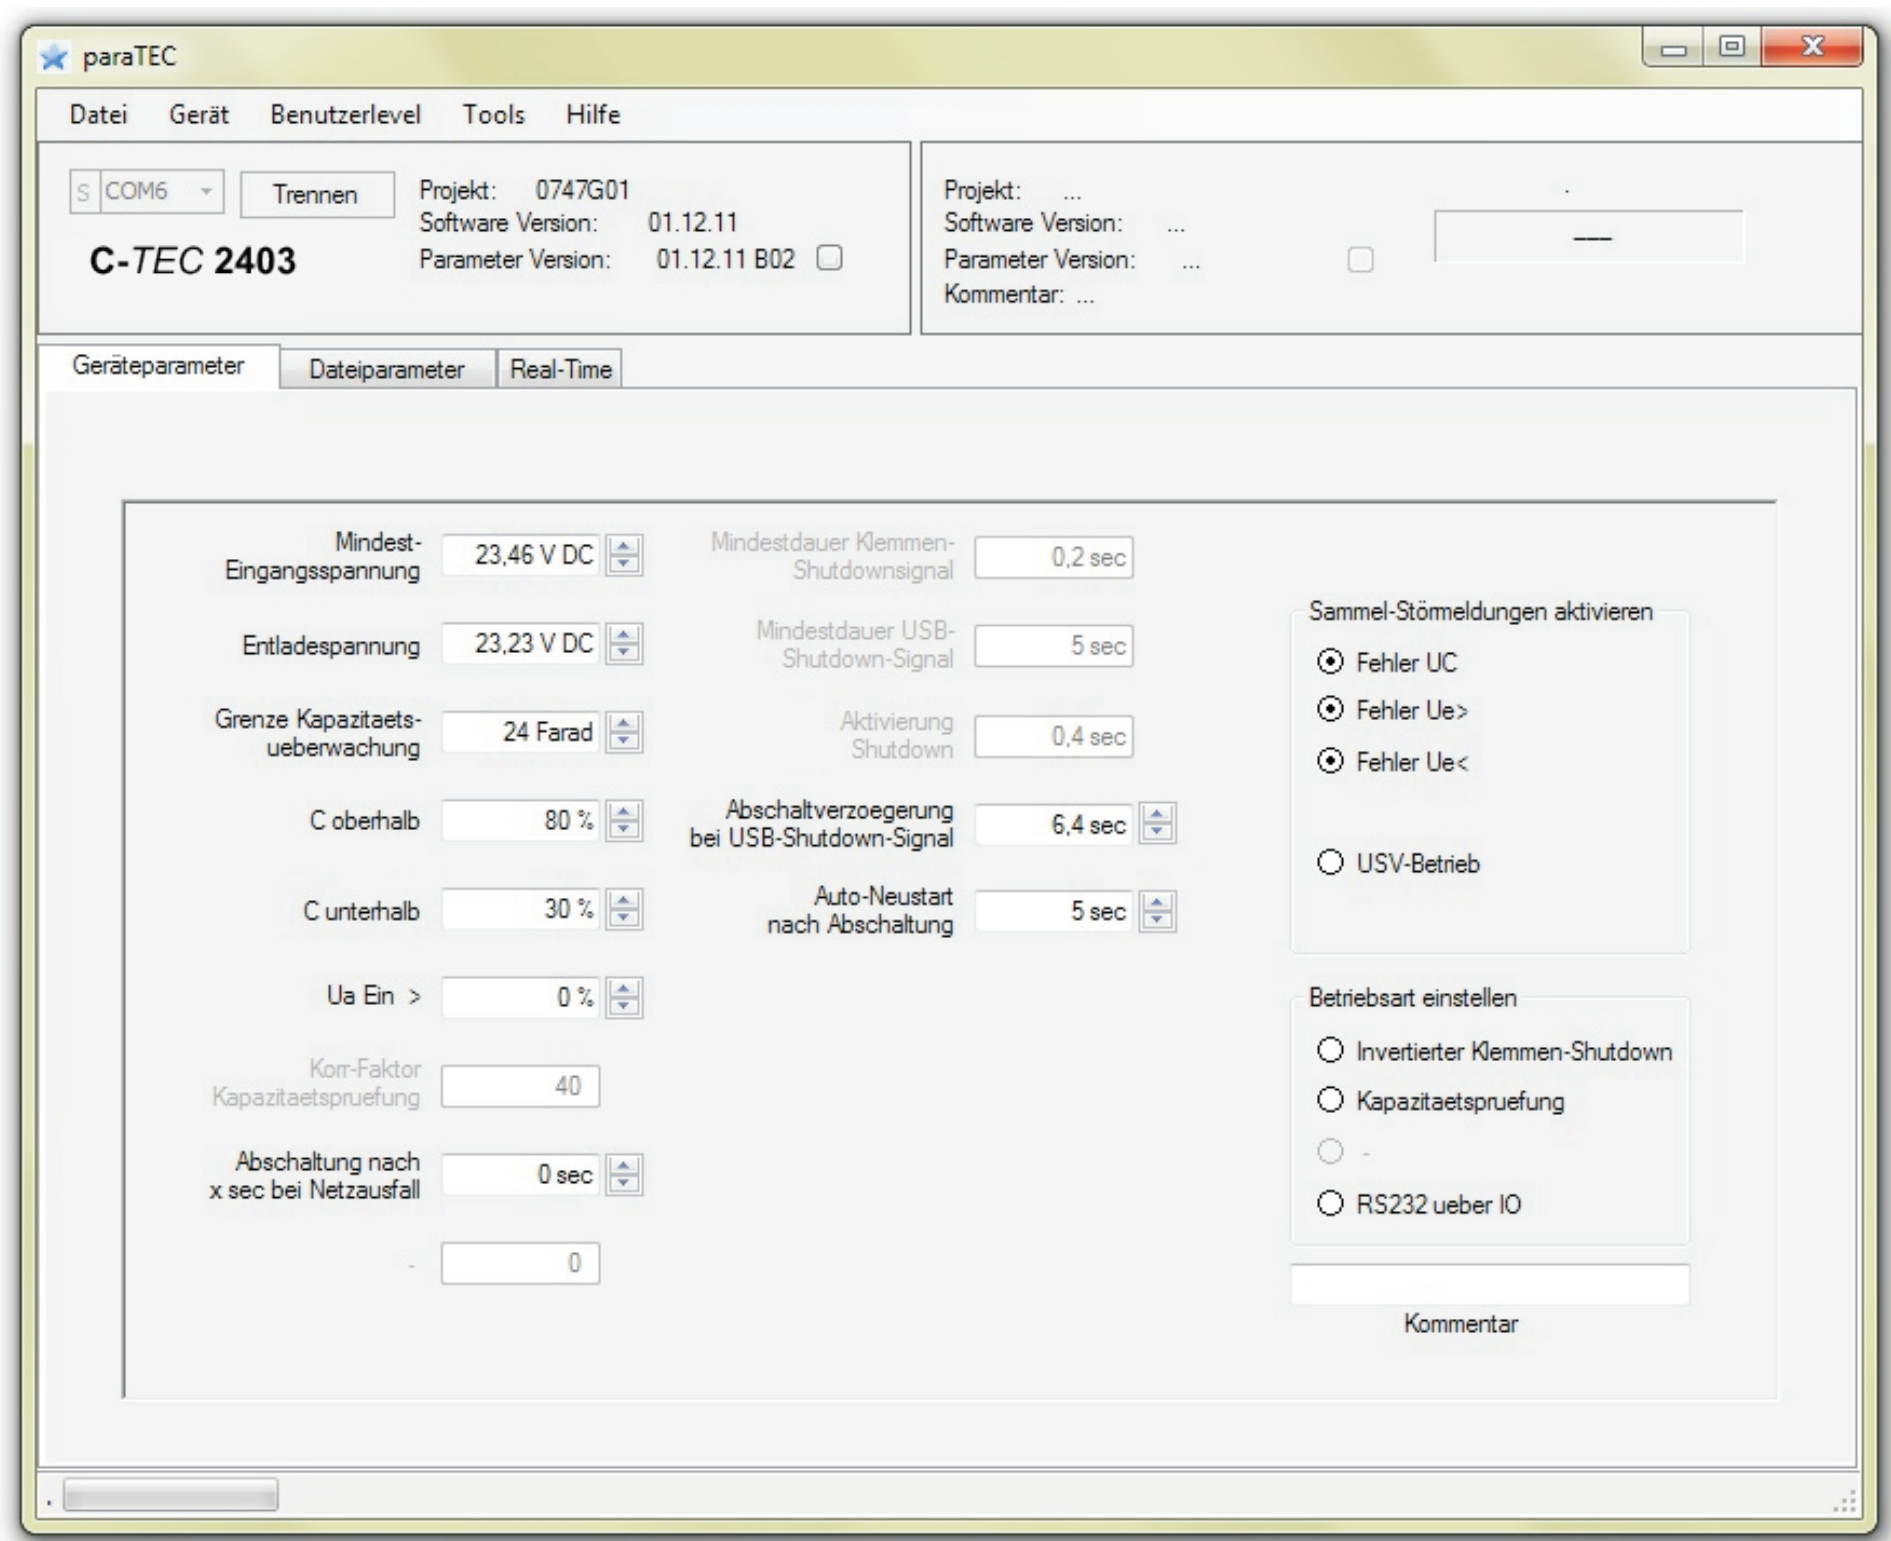

Mit der paraTEC Software können Sie Geräteparameter wie Ausgangsspannung, zulässiger Spannungsbereich, Sammelstörmeldungen usw. einstellen.

Fordern Sie unsere Unterlagen an!

Shutdown-Software

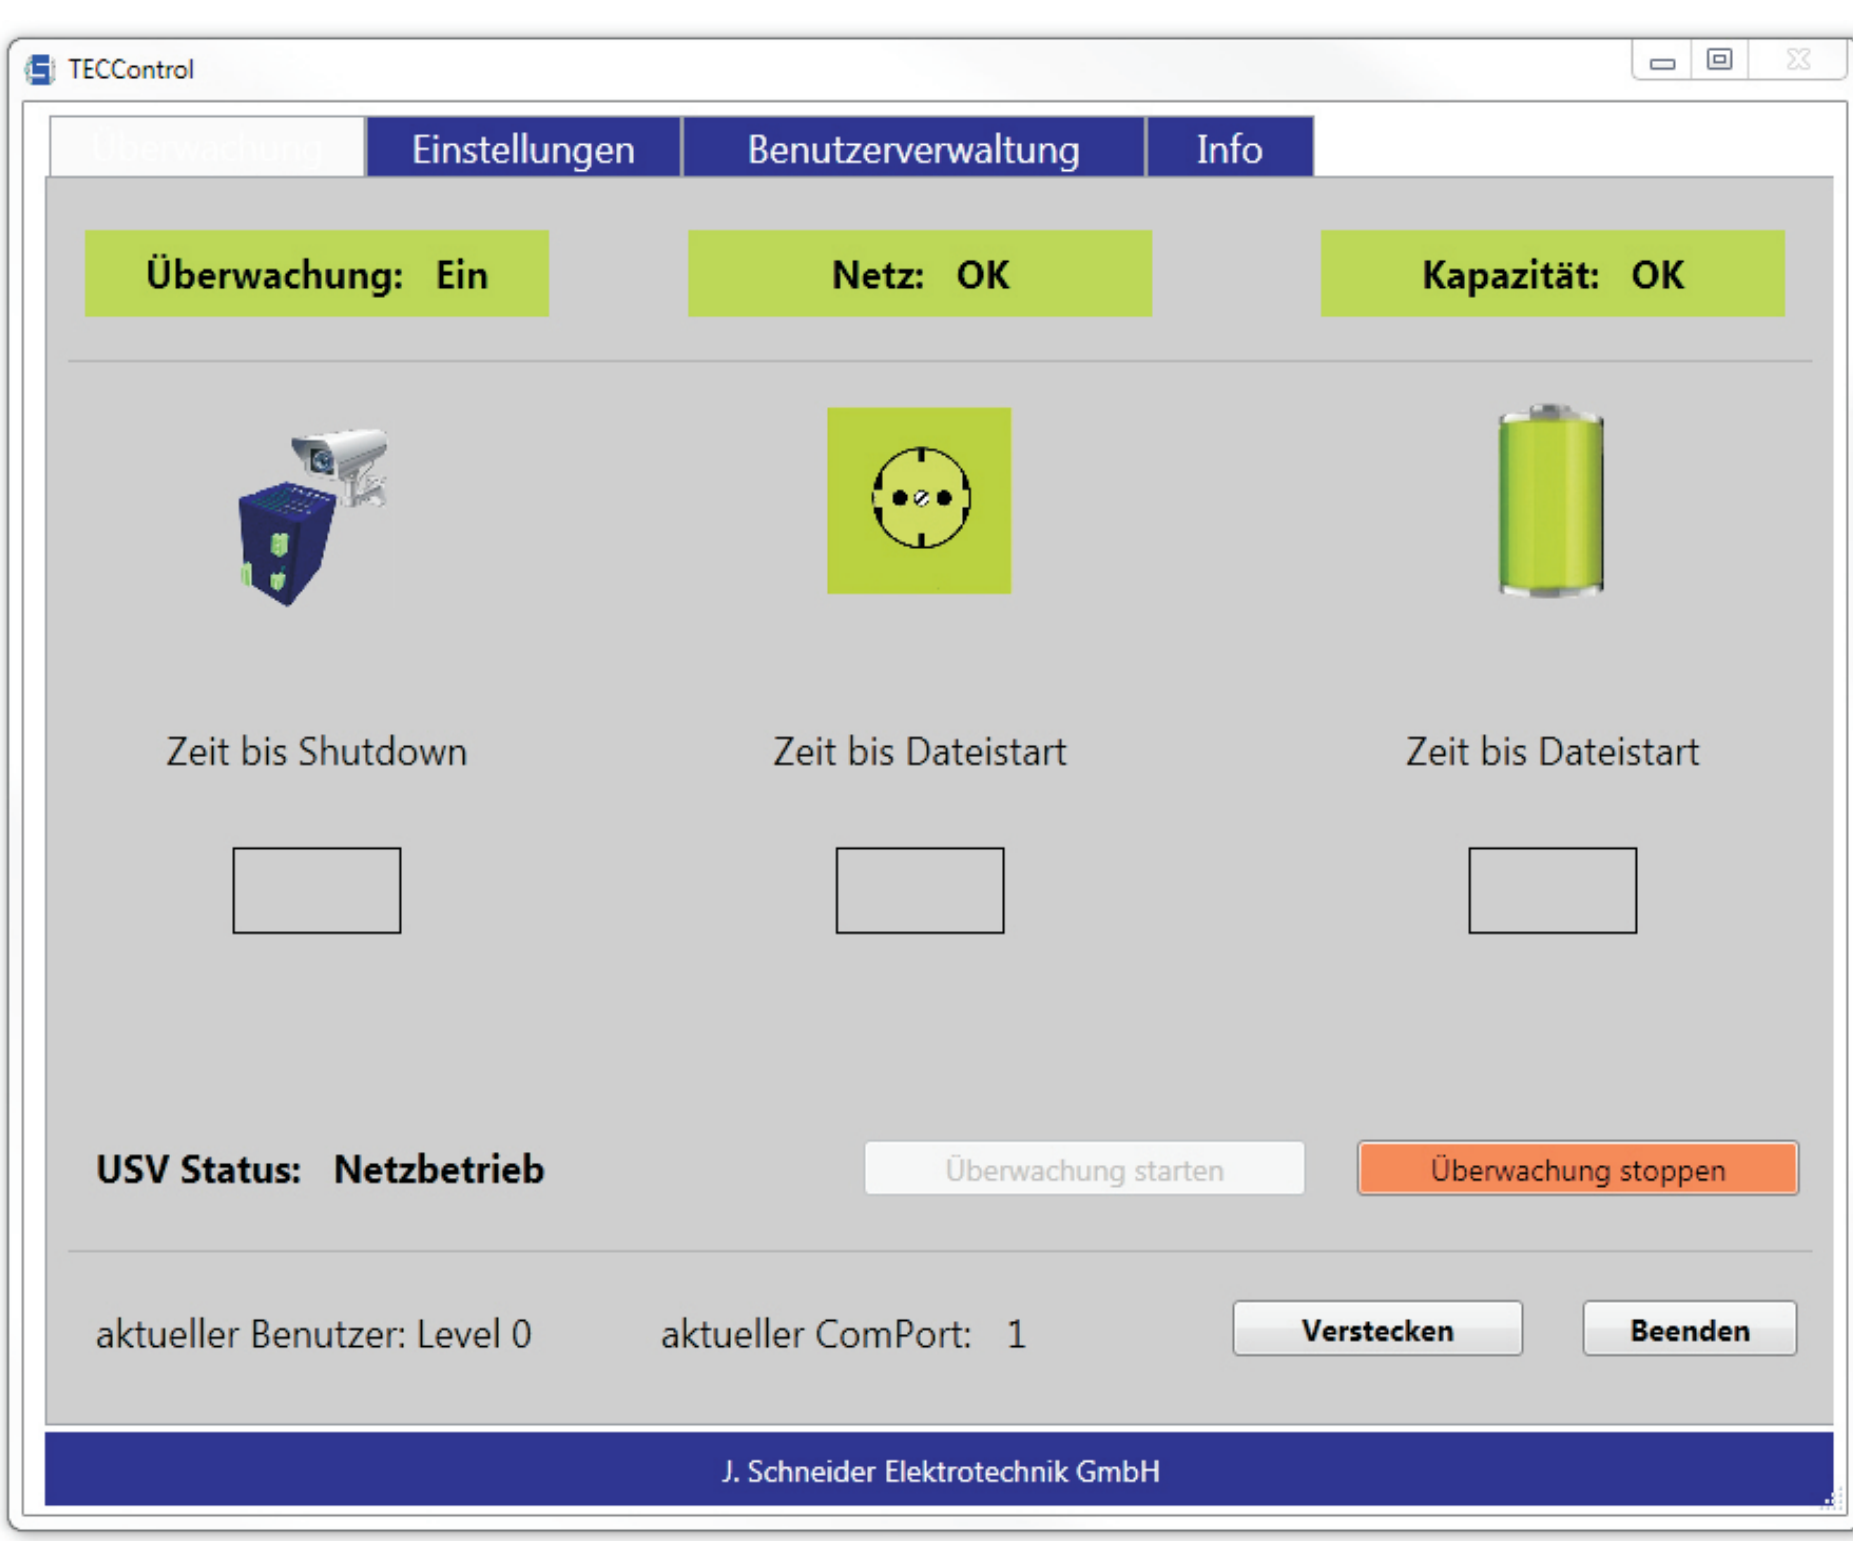

Die TECControl Software automatisiert den System-Shutdown bei Netzausfall und den kontrollierten System-Neustart bei Netzwiederkehr. Unkontrollierte Prozessstops werden vermieden.

Fordern Sie unsere Unterlagen an!

Achtung! Die Sicherheitshinweise der Betriebsanleitung sind zu beachten. Der Anschluss ist nur durch Elektrofachkräfte erlaubt. Das Blatt „Schnellstart“ dient nur als Hilfestellung.

Helmholtzstrasse 13
77652 Offenburg
Werner-von-Siemens-Strasse 12
77656 Offenburg-Elgersweier

Tel. 0781 / 206-0
Fax 0781 / 2 53 18
www.j-schneider.de
info@j-schneider.de




Electrical Connection and Start-up

1.




Connect the power supply to the mains (230 V AC)

2.

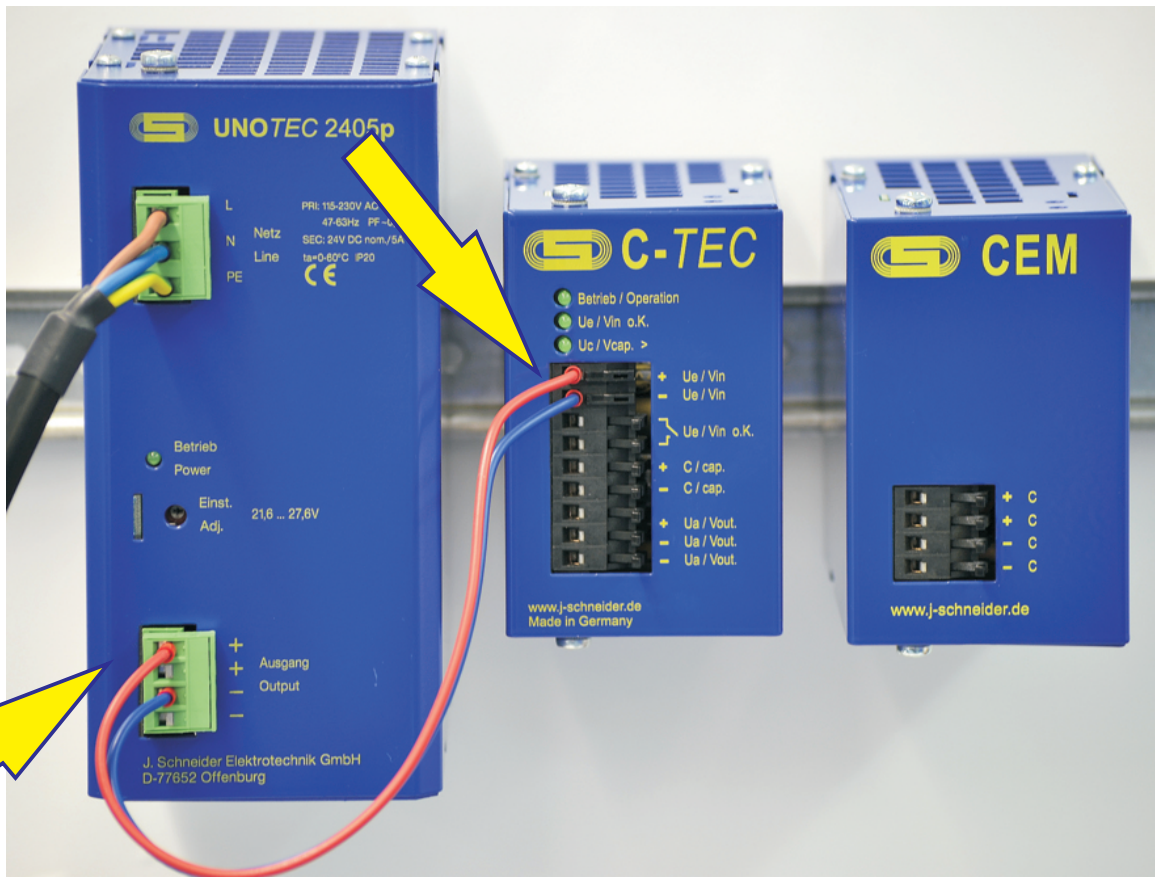


Connect the C-TEC to the output of 24 V DC power supply

3.

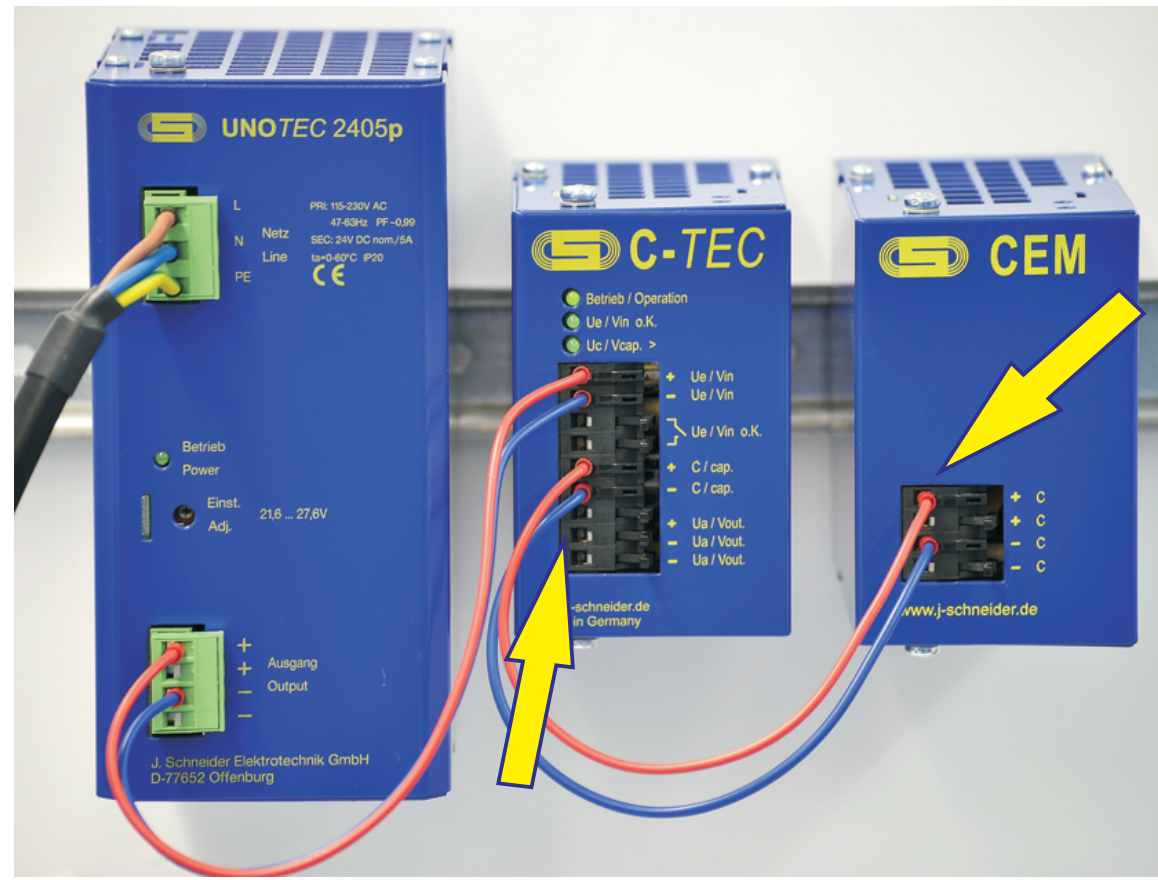

Connect the CEM to the capacitor output of the C-TEC

4.

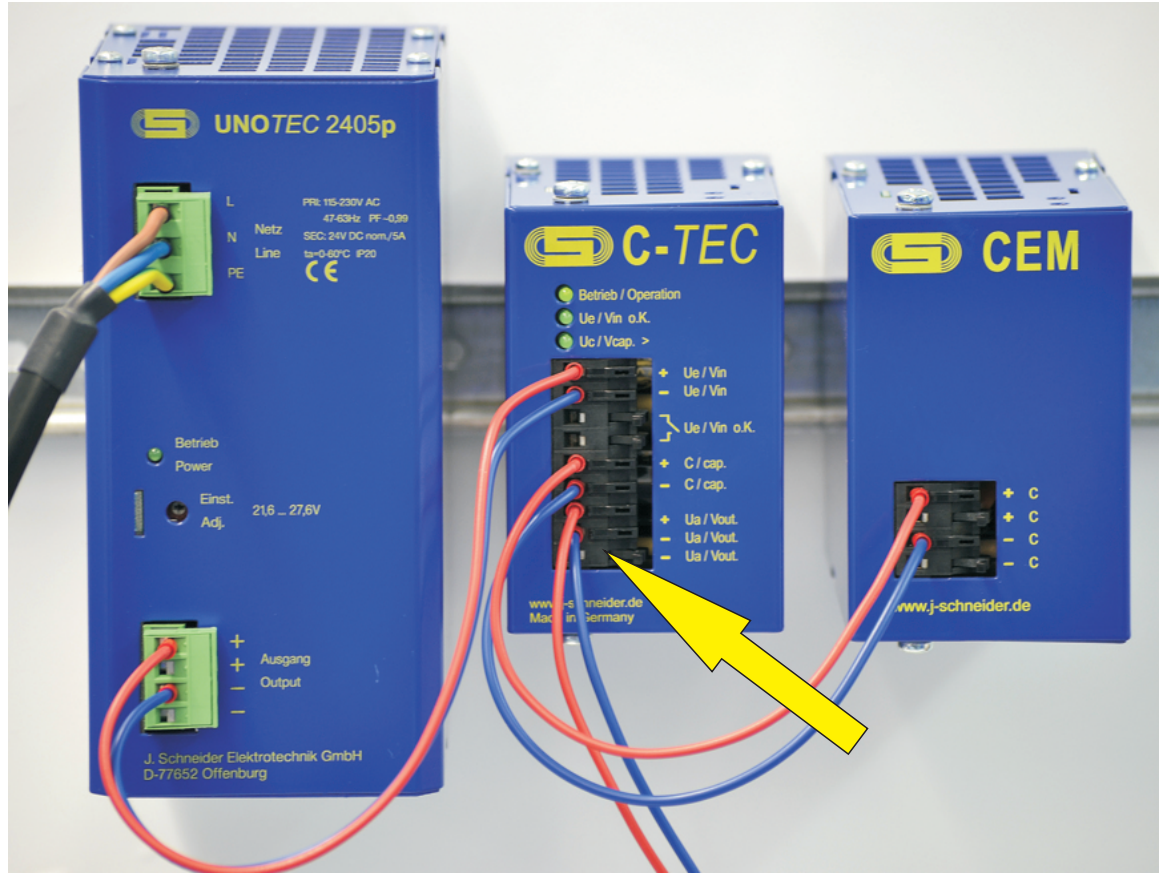

Connect the load to the buffered 24 V DC output of the C-TEC

5.




Wiring of the signal contact. Input voltage OK

6.



C-TEC is completely charged. The LEDs „Betrieb/Operation“, „U_e/V_{in} o.K.“ and „U_c/V_{cap} >“ illuminate


Parameterizing-Software

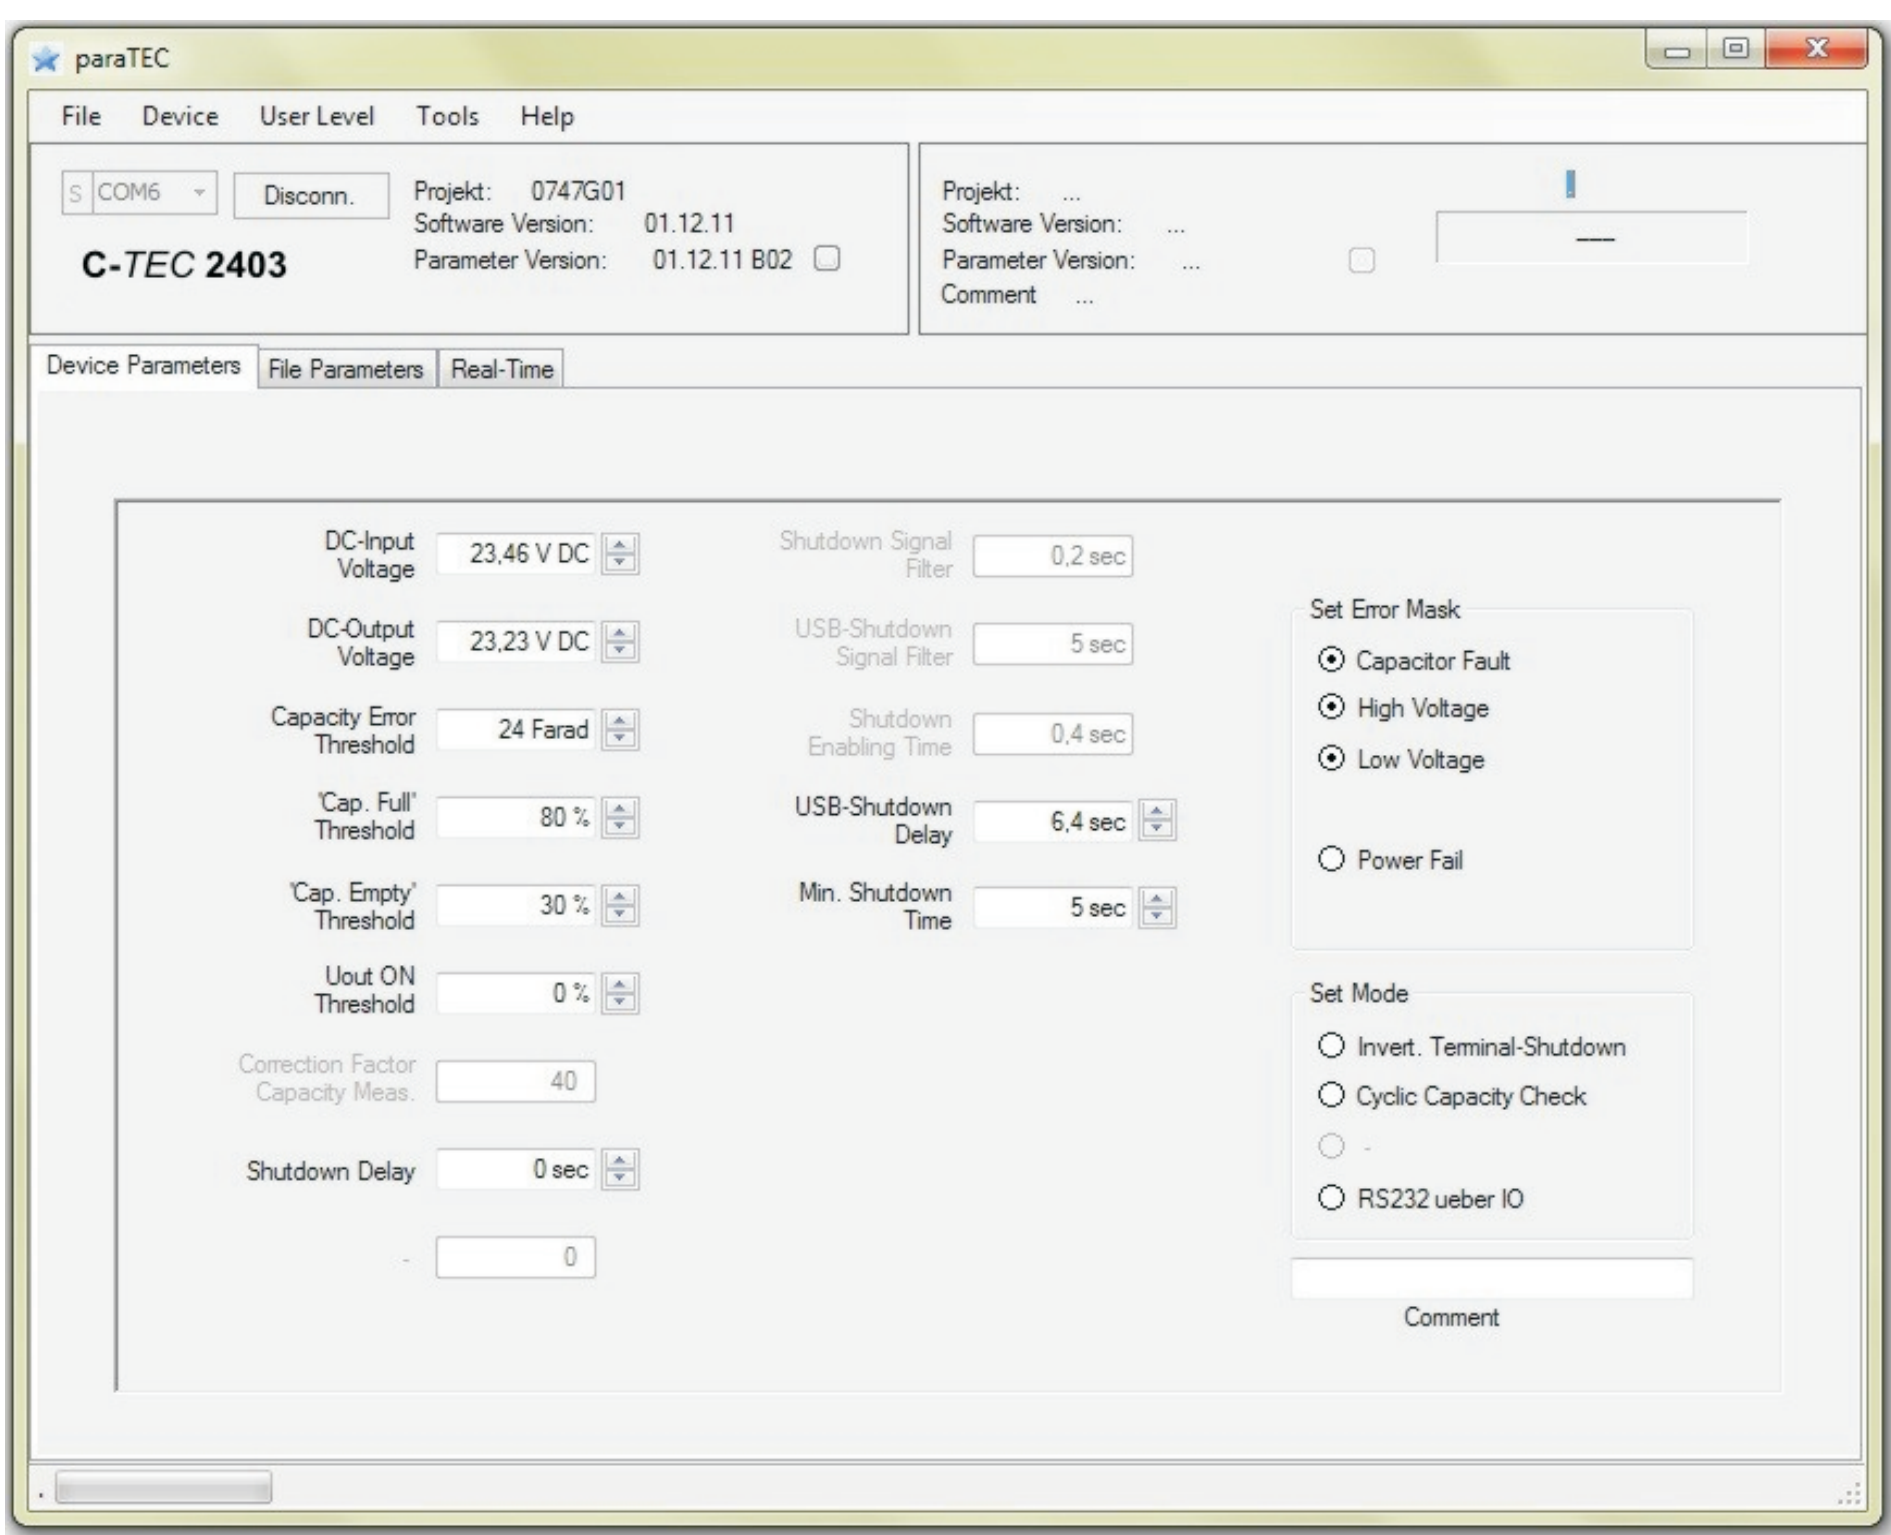

Device parameters such as output voltage, permissible voltage range, general error a.s.o. can be adjusted with the paraTEC software.

Please ask for further information!

Shutdown-Software

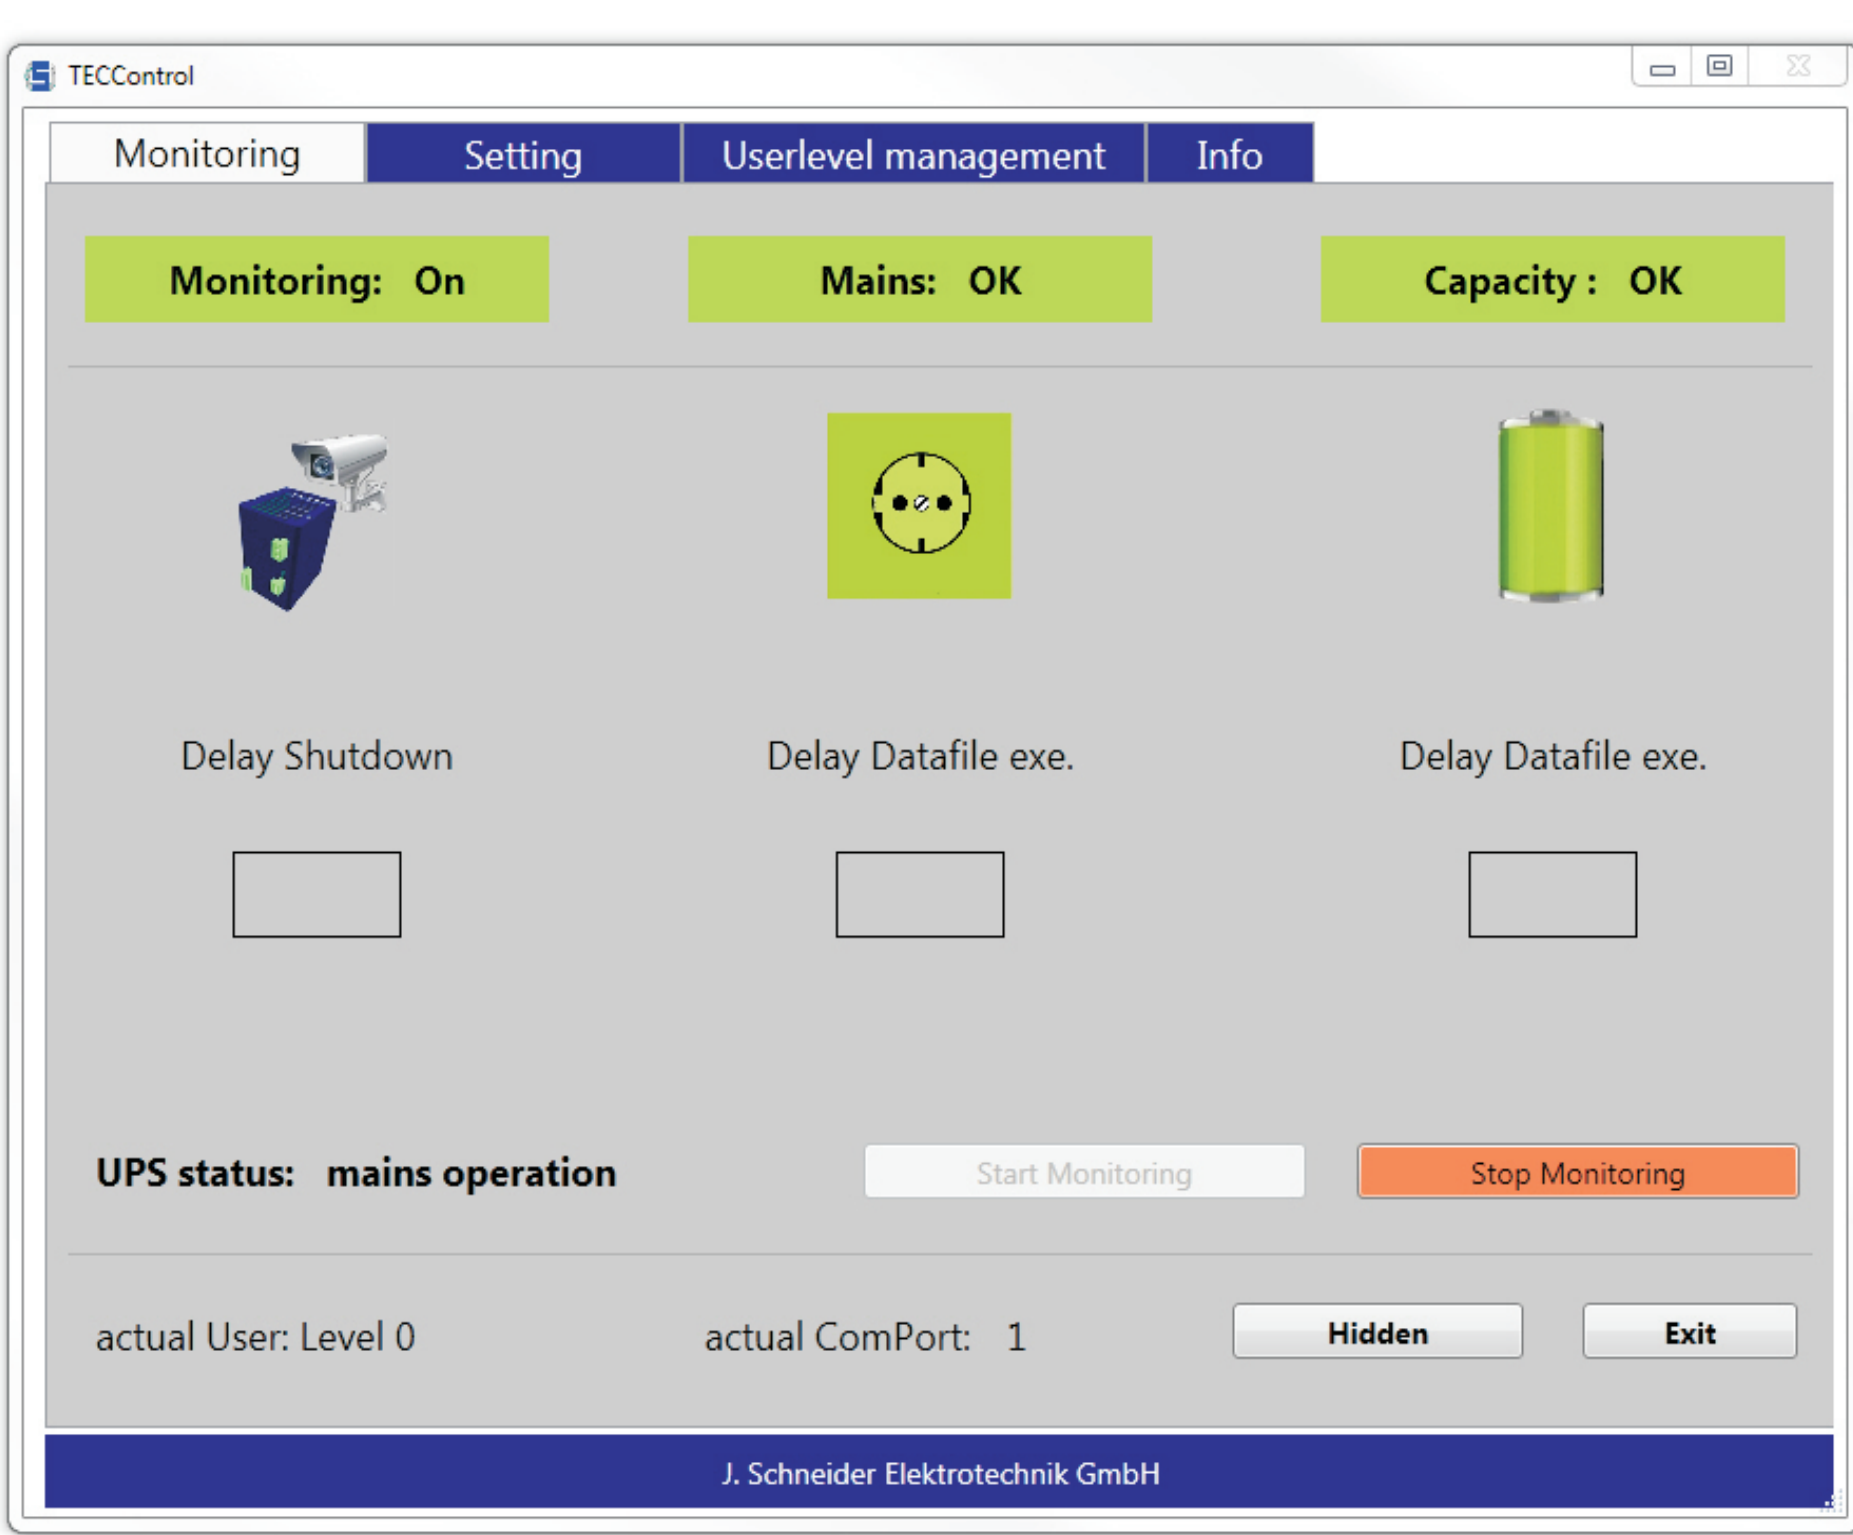

The TECControl-Software automates the system-shutdown at power failure and the controlled system-restart after power recovery.

Please ask for further information!

ATTENTION! The safety notes of the operating instructions have to be regarded. Installation and wiring work may only be carried out by qualified electricians. The sheet „Quickstart“ is only a support.

Helmholtzstrasse 13
77652 Offenburg
Werner-von-Siemens-Strasse 12
77656 Offenburg-Elgersweier

Phone +49 (0)781 / 206-0
Fax +49 (0)781 / 2 53 18
www.j-schneider.de
info@j-schneider.de

